


BP200 Brushless motor peristaltic pump



● Structural decomposition

- Suitable for viscous non-viscous liquid transport
- Small size compact structure light weight
- Plastic gear transmission has high reliability and low noise
- Easy maintenance and quick replacement of pump tube pump head
- PWM speed regulation comes with feedback
- Electronic commutation has excellent electromagnetic compatibility

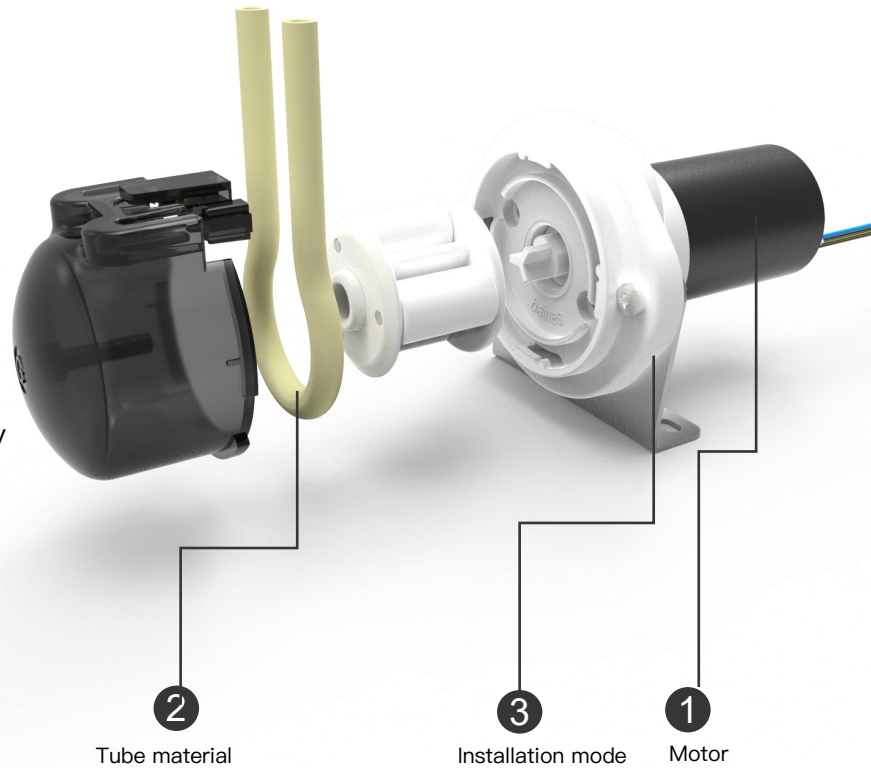

● Model Interpretation

BP200 — **DO** **B30** **B**

1
2
3

1

DO:24Vbrushless DC motor DP:12Vbrushless DC motor

2


S:Silicone Tube B:Pharmed BPT

3

A Installation mode B Installation mode

● Structural decomposition


- Suitable for viscous non-viscous liquid transport
- Small size compact structure light weight
- Plastic gear transmission has high reliability and low noise
- Easy maintenance and quick replacement of pump tube pump head
- PWM speed regulation comes with feedback
- Electronic commutation has excellent electromagnetic compatibility

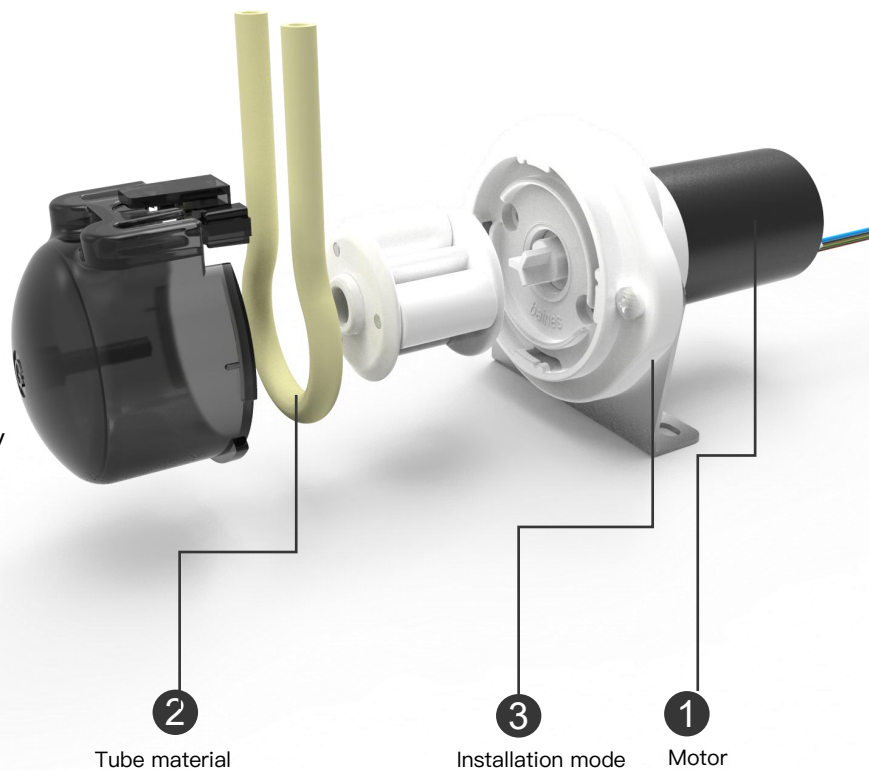

● Model Interpretation

BP200 — **DO** **B30** **B**

1 2 3

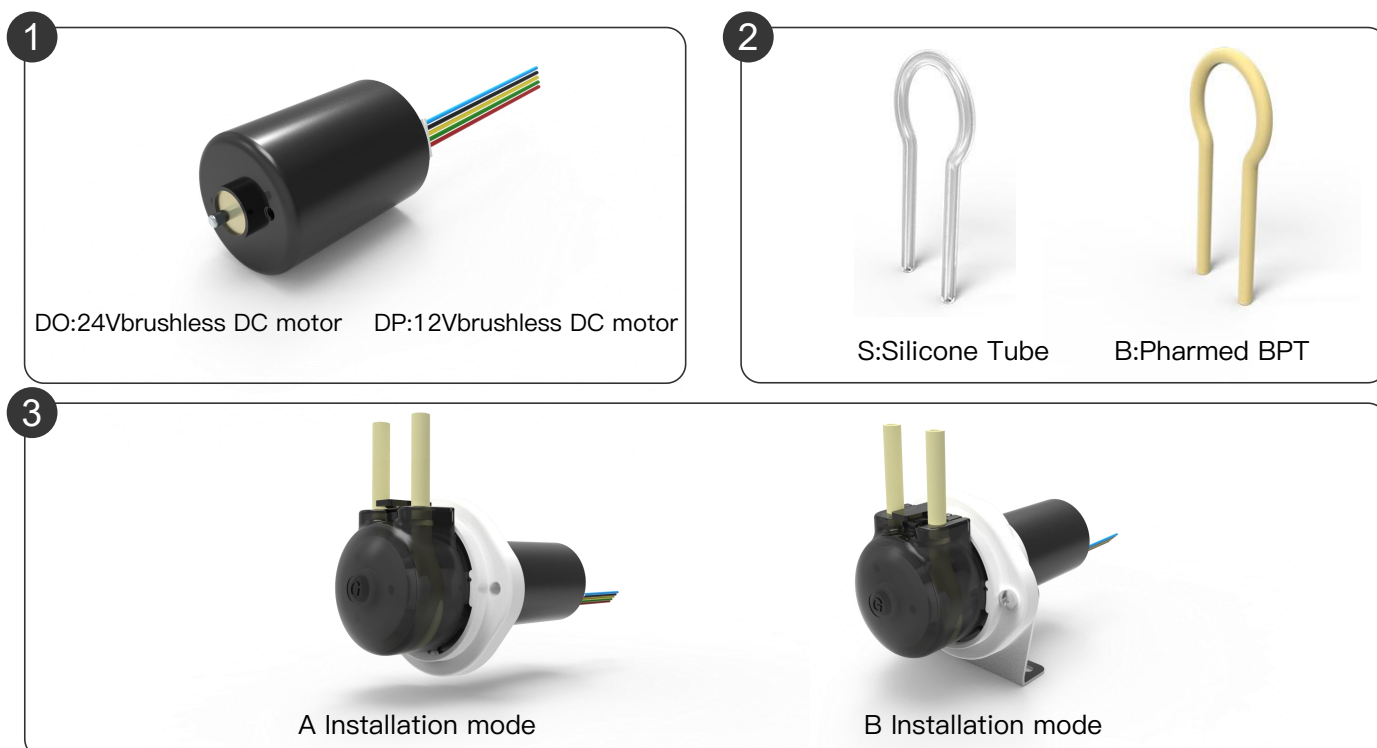

● Pump tube selection

Code/Material	Code/Material	Tube life
B  PharMed BPT	No cytotoxicity and hemolytic, resistance to ozone and UV rays heat, ozone, acid and alkali resistance, anti-aging anti-oxidation, long life. Operating temperature range -51 °C ~132 °C	≥1000h
S  Silicon tube	Low cost, weak acid and alkali resistance, corrosion resistance to chemicals compared to the BPT pump pipe	≤200h

Pump tube life testing method:

BP200 peristaltic pump, speed: 360r/min, temperature 20 °C, Test liquid: water, continuous operation test. The slower the rotational speed of the peristaltic pump, the longer the service life of the pump tube. The service life of the pump tube may vary depending on the operating conditions, pipeline pressure, and liquid corrosiveness.

● Flow parameter

Tube Species		S30	S46	B30	B46
ID×OD		3X5	4X6	3X5	4X6
Tube Materials		Silicon tube	Silicon tube	BPT	BPT
Flow rate ml/min	24V Brushless motor 0.3A	110	220	100	190
	12V Brushless motor 0.6A	110	220	100	190
deal working conditions: ambient temperature 0–50 degrees, relative temperature less than 80%					

Flow testing method:



Water test at room temperature (20 °C) and atmospheric pressure.

The above data is for reference only, and there may be deviations in flow rate depending on different liquids, pressures, and pipeline lengths.


The material, flow rate, and control method of the pump tube can be customized according to the needs.

● Installation method



Installation mode(A)

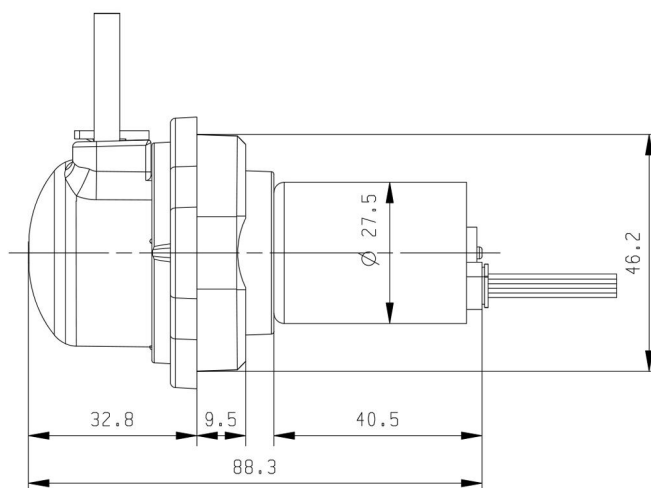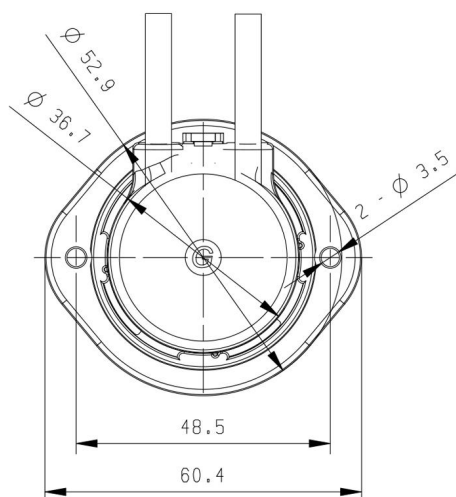

Opening size(A)

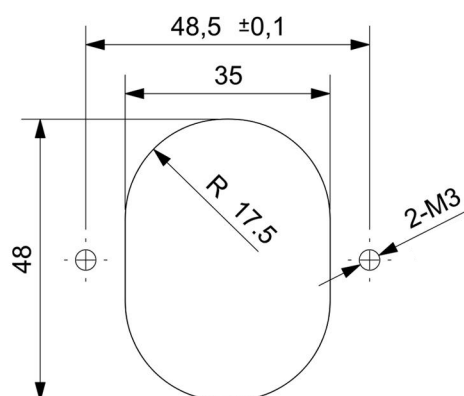


Installation mode(B)

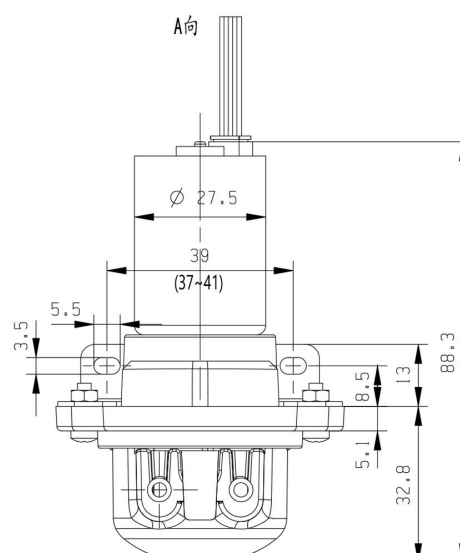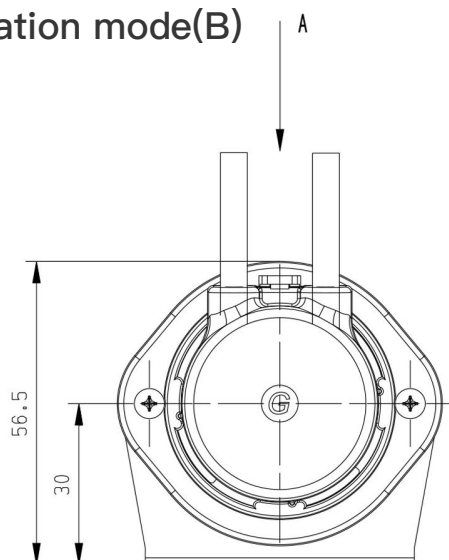


● Installation method

Type A Installation Diagram

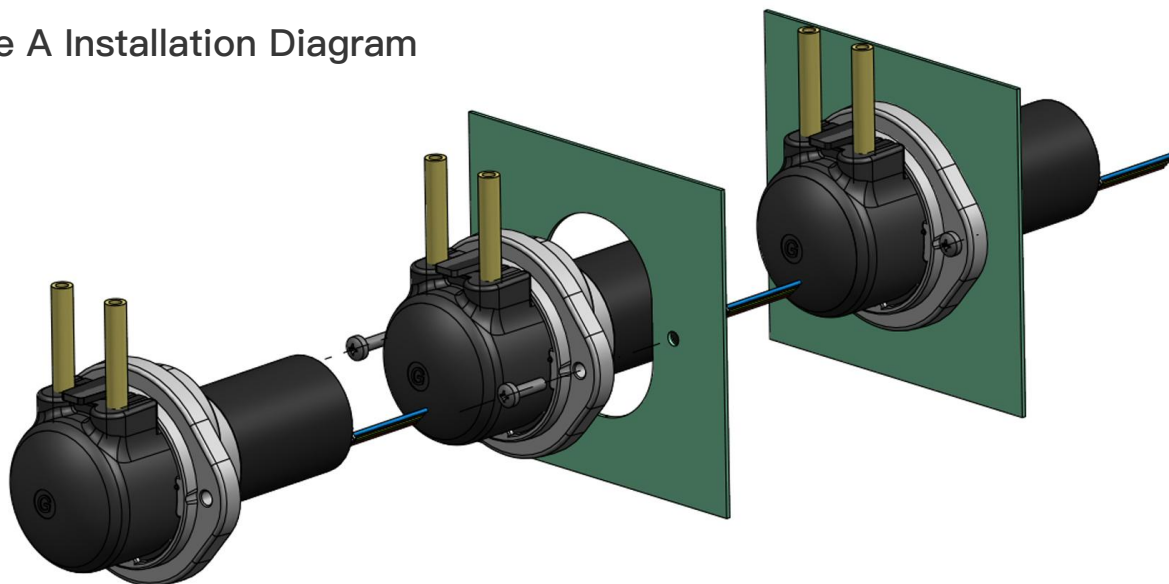


Type B Installation Diagram

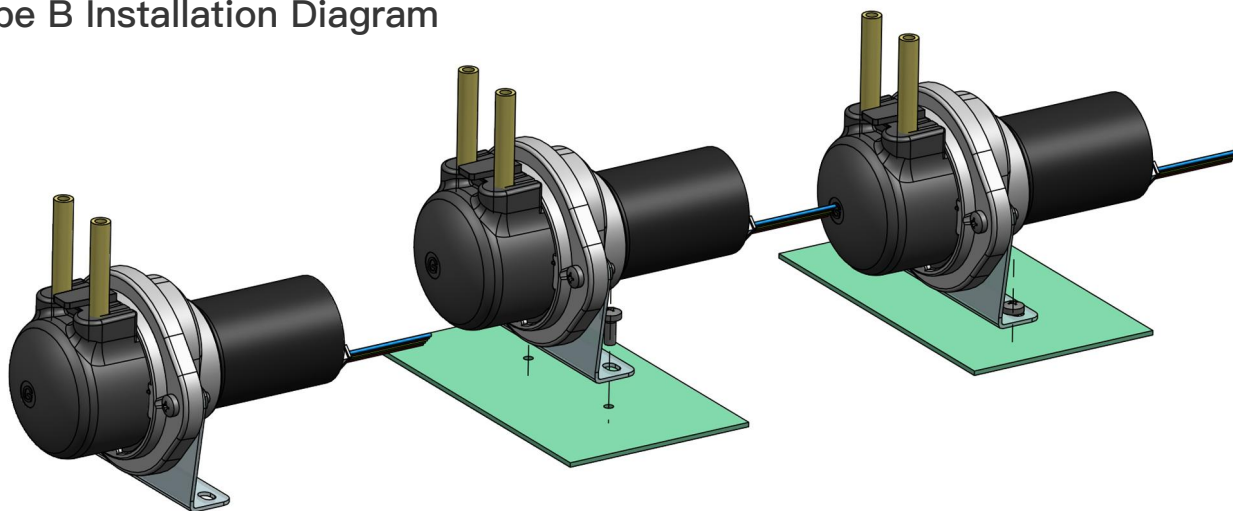


Pump head removal diagram

1. Load the corresponding position in the direction of the Arrow

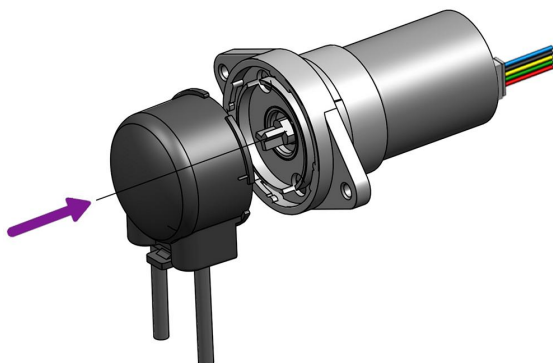

2. Clockwise rotation 15° slot in place Rotor rotation is recommended clockwise, The orientation of the entrances and exits is shown below

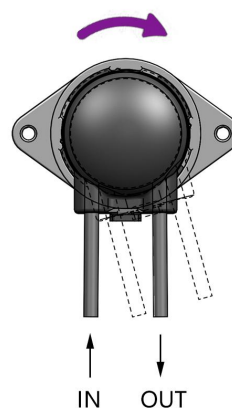

● Mortor terminations

No.	Signal	Wire color	Specifications	
1	V+	Red UL1007	Power + Volitage: DC 7-16V	
2	GND	Black UL1007	Power -	
3	PWM	Blue UL1007	IN	0~5V PWM frequency : 10KHZ-30KHZ
			IN	0VFull speed rotation; +: Red -:Black and Blue
4	F/R	Yellow UL1007	VIH	2.0VMin.CCW
			VIL	0.5VMax.CW
5	FG	Green UL1007	OUT	Read the output frequency of the motor and calculate the real-time speed of the motor:($n=60*f/p$)